



# GOJO® LTX™ Dispensing System

## EASY TO SERVICE. BUILT TO LAST. PERFORMANCE GUARANTEED.

GOJO is known for engineering reliable, easy to service skin care systems. It's a legacy we're building upon with the unmatched dependability of the LTX dispensing system.

### To ensure proper operation of your LTX Dispensing System, please review these simple measures:

#### After servicing the dispenser, it may take up to 30 seconds to properly activate once the cover is closed

- During this time, the dispenser is auto-calibrating to the surrounding lighting conditions in order to optimise performance
- This auto-calibration delay occurs only following opening and closing of the cover
- It may take 2-4 attempts before soap/sanitiser dispenses from a new refill

#### Batteries must be installed correctly and the battery pull tab must be removed

- If there is no light on the front of the dispenser, check to see that the battery pull tab has been removed (pull tab has a red arrow and is located near the bottom-right battery)
- Note** - For demonstration purposes, the battery pull tab can easily be placed back in its original location.
- If batteries have been installed properly, the battery pull tab is removed and there is no light on the front of the dispenser, then remove the installed batteries and replace with 4 new D alkaline batteries

#### LIGHT REFERENCE:

- **Blinking GREEN Light**  
- dispenser ready
- **Blinking RED Light**  
- refill issue (*no refill, wrong refill, non-functioning refill*)
- **Solid RED Light**  
- insufficient power available

#### The correct refill must be properly loaded

- A blinking green light on the front cover indicates the proper refill is loaded
- If the light on front of the dispenser is blinking red, check to make sure the correct refill is properly loaded into the dispenser. GOJO refill into a GOJO dispenser, PURELL refill into a PURELL dispenser

#### The dispenser cover must be closed properly

- Once batteries and the correct refill are properly in place, close the dispenser cover and press firmly until the cover clicks into place

#### Hands must be located properly to activate the dispenser

- Position hand approximately two inches beneath the centre of the dispenser to activate (see figure A)
- The dispenser is designed to dispense product only when hands are placed in the proper location in line with the dispenser's sensors

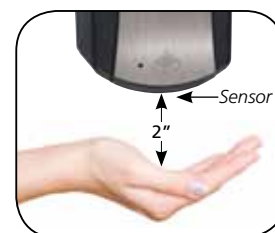


Figure A

#### For any additional questions, please contact:

Customer Service on +44 (0) 1908 588444 or visit [www.GOJO.com/unitedkingdom](http://www.GOJO.com/unitedkingdom)

