



FIT



COMFORT



PROTECTION

# LANI 6100 FFP1 NR D



## CHARACTERISTICS

- Cup-shaped design
- Easy to shape nose clip
- Comfortable to wear
- The head straps keep the mask firmly in place and provide a good seal.
- Latex-free head straps
- This mask is not reusable
- This mask has passed the Dolomite dust test
- Packaged per 20 units in an attractive and handy dispenser box
- Useful to protect against dust particles up to 4x the threshold value

**Article number: 4.05.610.00**

## SUITABLE FOR ACTIVITIES IN E.G.

- Construction
- Industry
- Transport & logistics
- Shipbuilding
- Cleaning
- Metal technology

## COLOUR

White


## PACKAGING

- 20 items in dispenser box
- 240 items (12x20) in outer box

**CE 2797**  
EN 149:2001+A1:2009

### PRODUCT INFORMATION

SIZE	ARTICLE NO.	EAN CODE 20 UNITS (DISPENSER BOX)	EAN CODE 240 UNITS 12X20 (OUTER BOX)
one size	4.05.610.00	8718249020858	8718249020865

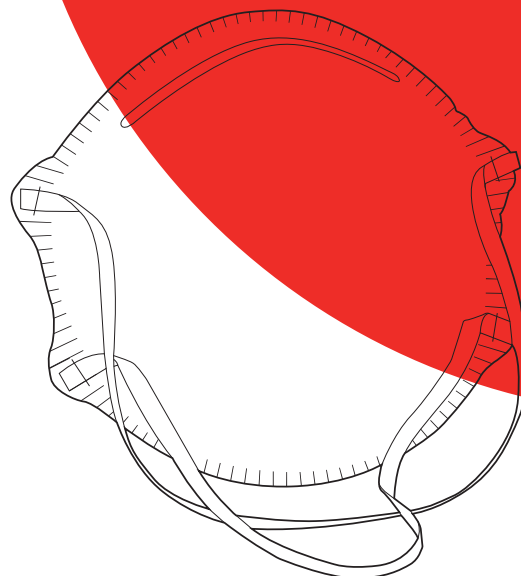

### INSTRUCTIONS FOR THE WEARER



**1.** Hold the mask in your hand with the nose clip on your fingers. Let the head straps dangle freely beneath your hand. **2.** Place the mask firmly against your face and ensure the nose clip covers the bridge of your nose. **3.** Stretch the bottom elastic strap, pull it over your head and place it in your neck (beneath your ears). Stretch the top elastic strap and place it over the top of your head (just above your ears). \*Only for dust masks with adjustable straps: while holding the dust mask in the correct position with one hand, you can adjust the tension of the straps by pulling on the pull flap of each strap. (You can reduce the tension by pressing on the back of the clasp). **4.** Press down on the soft nose clip with both hands and shape it to fit your nose properly. **5.** Close both hands over the mask and breathe in quickly to test the fit. You should feel a partial vacuum inside the mask. If any air is leaking in around the nose, you must adjust the fit of the nose clip. If any air is leaking in along the sides of the mask, you must adjust the head straps.

### STORAGE CONDITIONS

The dust masks are designed for single use (no more than one shift). No maintenance required. After using the mask once, dispose of it in accordance with local waste disposal prescriptions. Until use, the masks must be stored in their original packaging without being exposed to direct sunlight.

### TESTING INSTITUTE

This dust mask has been certified by: BSI Group The Netherlands B.V. (Notify Body No. 2797), John M. Keynesplein 9, 1066 EP Amsterdam, the Netherlands.

### DECLARATION OF CONFORMITY

For a copy of the declaration of conformity, we refer you to the following link: [www.oxxa-safety.com/doc](http://www.oxxa-safety.com/doc)

### RELATED PRODUCTS



#### CIELO 6200

Art. no. 4.05.620.00

### YOUR SUPPLIER: